

Moulded Cords & Cables Ltd. Information Library.

How to Wire a NEMA5-15P Plug. (STK221-2)

© MCC Ltd 2010





ELECTRICITY CAN KILL!
If you are in any doubt at all about what you are doing,
or your ability to do the work, you should refer any
mains connection work to a qualified electrician.



Wiring up a NEMA5-15P 3 Pin USA Plug.

1. Wire Size and Range for Round Cords Only
Cord Diameter .230" to .720".
2. Wire Preparation.
Insert cable into back housing through cord clamp.
Strip wire insulation and cord jacket as shown in figure 1.
Do not fit tin conductors.
3. Wire Terminations.
Insert cord through cover beginning from cord clamp end. Insert all
stripped conductors fully into proper wire termination holes as per figure 2.
Tighten termination screws securely.
4. Assembly.
Slide cover up cord and over wired body. Tighten assembly screws,
securely attaching body to cover, and the clamp screws until tight on
the cable jacket.

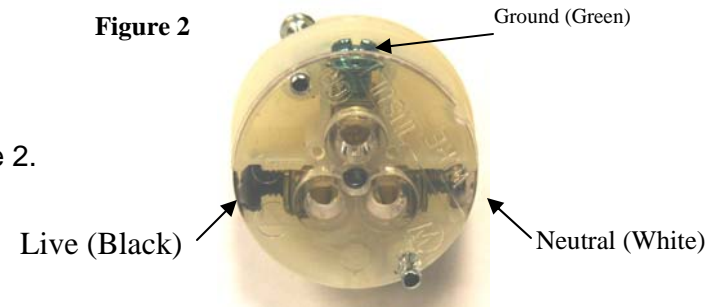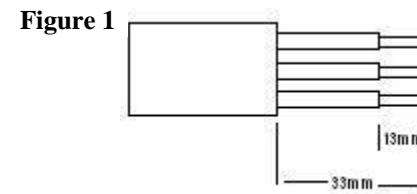

This plug is designed for use with American Colour code Electrical System.